

# Degreasing Powder - Fat Fryers



## Product Usage Guide

Professional



### BB100-10




#### Fat Fryers




**1** Use appropriate PPE as indicated in the Safety Data Sheets and place Safety Signs.



**2** Drain out oil.

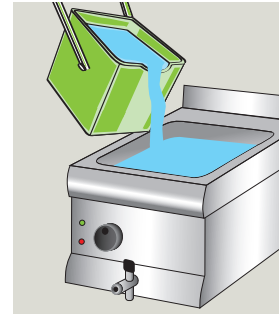

**3** Fill with clean water to level.

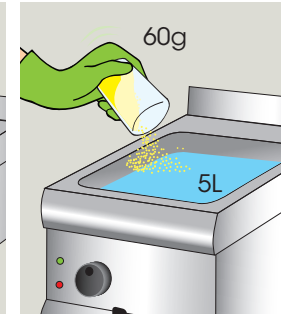

**4** Add 60g of Degreasing Powder per 5 litres of water.



**5** Bring to boil.




**6** Simmer for 10 minutes.



**7** Drain out the solution.



**8** Rinse with clean water.

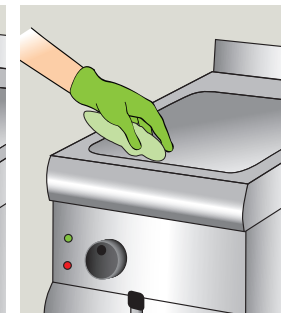

**9** Dry thoroughly.



**10** Refill with oil and remove Safety Signs.

#### Health & Safety

Please refer to the Safety Data Sheets



Scan for further product details



Do not use on aluminium.

www.jangro.net